



USER MANUAL

Model Series
E80, E65, E52, E42, E32

INTRODUCTION:

Thank you for purchasing our ElectroBins®. ElectroBins® is designed for Domestic and Commercial use. The complete unit is designed for long years in service making it one of the most reliable trash bins in the world.

USE OF THIS MANUAL

FIRST TIME USERS: Read the complete manual carefully
FAMILIAR CUSTOMERS: Refer to the Quick Reference table.
For More Information: email us to info@electrobins.com

FIRST TIME USE

WARNING: NEVER LIFT THE COVER WITH THE LID.

Installation: For best results our company will give installation guide lines.

Basic Training: We recommend Basic training to Maintenance staff.
Cleaning staff must be trained on bag replacement.
The machine must be switched off every time the head is removed, batteries changed or bag replaced.

First time installation: make sure machine switch is turned OFF.
Place Battery according to Polarity.
Place head in correct position.
Switch ON.
Ready for use when Pilot light is blinking red.

ElectroBins® FEATURES

Stainless Steel Finish: The Stainless Steel Used insures the steel never rusts.

Plastic base: All ElectroBins® stainless steel pails are designed with plastic base insuring your floor is protected from scratching.

Plastic Wheels Models E65 and E80 can be fitted with wheels making it easy to convenient in big kitchens.

SmartRing® The smartRing® insures the bag does not slip into the pail while in use. It is also designed so that the bag is completely invisible.

SmartFast® opening All ElectroBins® are fitted with a high sensitive SmartFast® infrared sensor to insure the lid starts opening within ½ second of sensing the hand or object. The sensor is set to detect the object at approximately 10-15cm.

Battery Life. (4x D size) All ElectroBins® are supplied with a set of batteries. For 100 opening per day the acidic battery average life span is 3-4 months. If Alkaline batteries are used the life expected is 10-12 months.

Battery Smart EWI. All ElectroBins® are fitted with a smart battery early Warning Indicator (smart EWI). Once the battery is weak the pilot light flashes Green. The batteries must be replaced immediately. The smartEWI only functions in Automatic mode.

Life Expectancy For long life care for the ElectroBins® is a must. ElectroBins® are designed as a solid and reliable machine. For home use we expect the ElectroBins® to last approximately 10 years.

MACHINE CARE

WARNING: Clean the head only with a damp cloth

Cleaning: ElectroBins® Cover is not waterproof. Do not clean the Cover with running water. Clean only with damp cloth. The pail can be rinsed with water.

Environment: The ElectroBins® has an electronic controller.
USE: Indoor use ONLY
OPERATING TEMP: Maximum 45°C
RELATIVE HUMIDITY: Maximum 85%

After sales Maintenance: All ElectroBins® controllers should be maintained regularly according to the following time table:

Every Three months:	General check.
Every Six months:	Battery replacement (optional)
Every year:	factory reset if needed

A factory reset is to insure the sensor is still operating at optimum setup, mechanical reset of gearbox. (first year all included under the free maintenance.

LED light INDICATION

WARNING: If green LED is blinking in Automatic Mode replace batteries.

Flashing Red with lid closed.	Idle, healthy batteries.
Flashing green with Lid closed	Weak Batteries (note: insure machine in Auto-mode)
Flashing green with lid open:	Manually opened. Remains open till close is pressed

FITTING of TRASH BAG

METHOD 1: (IN-Fold)	Remove the ring completely. Place the edge of the plastic bag over the pail edge. Place the smartRing and press down till the bag is securely held. Fold the bag edge inwards over the SmartRing.
METHOD 2: (OUT-Fold)	Open the new bag. Place the mouth of the bag inside the smartRing® Fold bag to the outside. Twist the edge of the bag till the bag is tight around the ring. With two hands hold the bag tight around the ring and press the smartRing® in place.

ElectroBins® OPERATION

As simple as A.B.C.

Automatic Mode: Bring your hand 10 -15 cm from the indicator.
Within half a second the lid will open.
The lid will close within 6 seconds.

Manual Mode Press the "ÖPEN" button to continuous open.
Press "CLOSE" to return it back to Automatic mode.

COMPANY WARRANTY

Standard Warranty.	All our ElectroBins® come with a standard one year warranty against manufacturers defects.
Extended Warranty.	For further information about our extended warranty consult your local Distributor.
Money back warranty.	For more information on our 15 day money back warranty consult your local Distributor.

QUICK REFERENCE

For More Information email us to info@electrobins.com
or
visit our website on www.electrobins.com

NOTES.

- Before removing the Cover always make sure the power is switched OFF.
- Never Lift the Cover with the Lid.
- Clean the head with a damp cloth only.
- If green LED is blinking *in Automatic Mode* replace batteries.
- Battery Indicator only functions in Automatic mode. Make sure it is in Automatic mode by pressing the "CLOSE" button.